



CHECKLIST



Always check the validity of the certificate before use.



Check the sharpness of the pivots.

 


Before use, check that the WLL of 2500 kg per clamp is not exceeded.



Before use, measure the guide rail thickness to determine the correct terminal block:

- For rails from 12 to 22 mm: small block.
- For rails from 5 to 12 mm: large block.





When fastening, check whether the bow shackle is properly secured.



Make sure the bow points downwards when loaded.



Place the sling as straight as possible below the Guide Brake (see image).



The hook may never be wrapped around the hoist chain.



The sling is placed too far away.



The sling is placed almost perpendicularly below the Brake.

Note: protect the sling if the beam has sharp edges.

FOR HELP OR ADVICE, CALL +31(0)174-403637.

