


EURO LOCK RELEASE SYSTEM

Installation Drawing

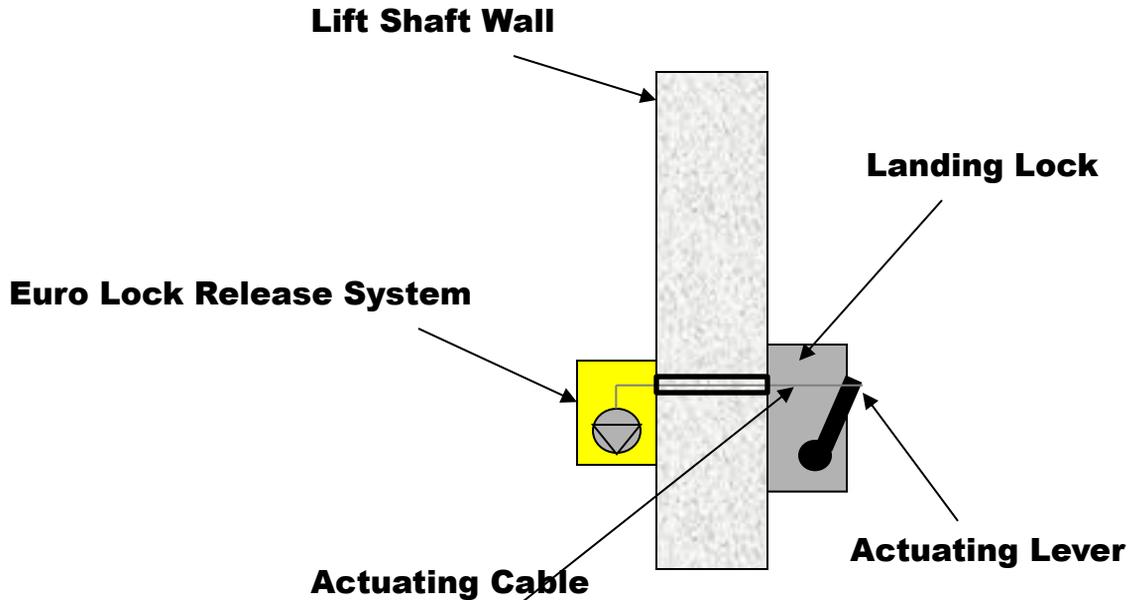

- 1. Firstly drill a 20mm hole through the wall 40mm above the shaft of the landing lock.**
- 2. Then mount the euro lock release system on the wall so that the hole is at the top of the box.**
- 3. Now fit the actuating lever on the landing lock shaft at a slight angle towards the lift shaft.**
- 4. The cable should run through the wall from the top of the euro lock release box to the top of the actuating lever. The cable should run horizontally.**
- 5. Connect the cable to the actuating lever and make sure the cable has no slack.**
- 6. Check the installation to ensure that the mechanism locks & unlocks safely.**
- 7. The Euro Lock Release System should be inspected and tested on a regular basis.**